


Таблица двоичных кодов (выбора стартового канала)

№№	код	Стартовый адрес при 3-х канальном	Стартовый адрес при 4-х канальном
1	100 000 00	1	1
2	010 000 00	4	5
3	110 000 00	7	9
4	101 000 00	10	13
5	001 000 00	13	17
6	011 000 00	16	21
7	111 000 00	19	25
8	000 100 00	22	29
9	100 100 00	25	33
10	010 100 00	28	37
11	110 100 00	31	41
12	001 100 00	34	45
13	101 100 00	37	49
14	011 100 00	40	53
15	111 100 00	43	57
16	000 010 00	46	61
17	100 010 00	49	65
18	010 010 00	52	69
19	110 010 00	55	73
20	001 010 00	58	77
21	101 010 00	61	81
22	011 010 00	64	85
23	111 010 00	67	89
24	000 110 00	70	93
25	100 110 00	73	97
26	010 110 00	76	101
27	110 110 00	79	105
28	001 110 00	82	109
29	101 110 00	85	113
30	011 110 00	88	117
31	111 110 00	91	121
32	000 001 00	94	125
33	100 001 00	97	129
34	010 001 00	100	133
35	110 001 00	103	137
36	001 001 00	106	141
37	101 001 00	109	145
38	011 001 00	112	149
39	111 001 00	115	153
40	000 101 00	118	157
41	100 101 00	121	161
42	010 101 00	124	165
43	110 101 00	127	169
44	001 101 00	130	173
45	101 101 00	133	177
46	011 101 00	136	181
47	111 101 00	139	185
48	000 011 00	142	189
49	100 011 00	145	193
50	010 011 00	148	197
51	110 011 00	151	201
52	001 011 00	154	205
53	101 011 00	157	209
54	011 011 00	160	213
55	111 011 00	163	217
56	000 111 00	166	221
57	100 111 00	169	225
58	010 111 00	172	229
59	110 111 00	175	233
60	001 111 00	178	237
61	101 111 00	181	241
62	011 111 00	184	245
63	111 111 00	187	249

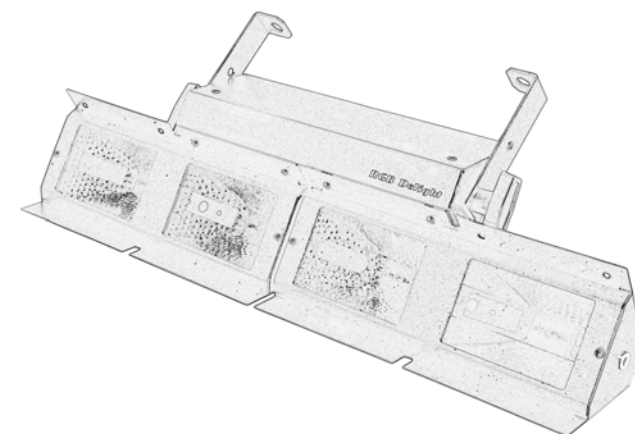

RGB-модуль



ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ